INSTRUCTION GUIDE FOR

BATTERY REMOVAL



STEP 1- Insert Key and Turn RIGHT/CLOCKWISE

- HEAR- Release/POP
- VISUAL- Top of battery will release from internal clamp



STEP 2-Grab battery with hand on indentation and lift back away from bike and UP and out of chamber holding battery

 VISUAL- Inspect the battery connectors at bottom of chamber and at bottom of battery. If damage is noted contact BIKE.com







Please let us know if you have any comments and/or follow up questions!

CS@BIKE.com or 1-877-755-2453(BIKE)

