

KICKSTAND- Removal, Replacement and Adjustments

The following instructions will outline how remove, replace and adjust your kickstand on your Denago City 1.0 eBike




Your kickstand is adjustable and is connected with 2 bolts that mount your kickstand to your bike frame. Tools you will need- YOUR DENAGO Multi Tool- 4mm Allen key




REMOVAL STEP 1-

Select the 4mm Allen key and remove the 2 bolts holding the kickstand to the frame- MAKE SURE YOU HAVE THE BIKE SUPPORTED OR LEANING AGAINST A WALL.

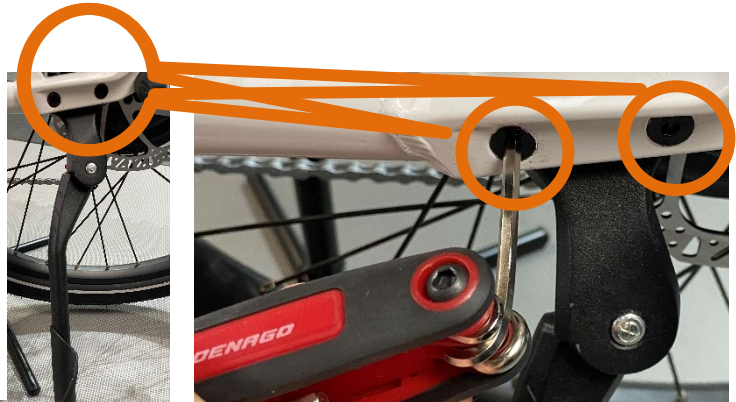


INSTALLATION STEP 1

Collect all parts- Kickstand, 2 bolts and Denago Folding Tool. You will use the 4mm Allen key. Place kickstand in between wheel and frame on the inside and align the bolts. Tighten and Secure

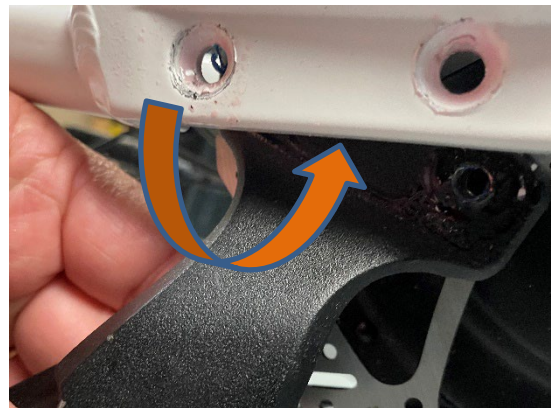

ADJUSTMENT- STEP 1

Your kickstand is adjustable. There is a 4mm Allen bolt on the inside of the kickstand. If your bike does not stand freely when kickstand is extended loosen the bolt and extend the lower leg. If your bike sits too tall and is not stable lower the leg.

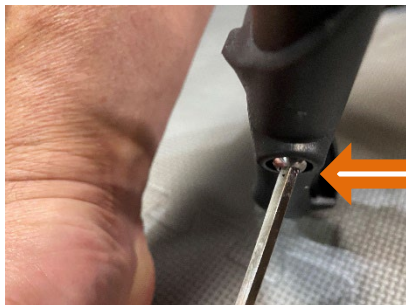

Loosen and Tighten and Secure 4mm Allen bolt on inside of kickstand



Please let us know if you have any comments and/or follow up questions!

CS@BIKE.com or 1-877-755-2453(BIKE)

